


Troubleshooting

PROBLEM	CAUSE/SOLUTION
No power	※ Check and make sure whether the fuse is blown,replace with the proper value if necessary.
Some errors occur in the LCD or no function when pressing the button	※ Press the RESET button.
Unable to receive stations	※ Check and make sure whether the antenna is connected it properly if not.
Poor effect on receiving a station	※ Antenna may not be the proper length. Make sure the antenna is fully extended or broken;If broken,replace the antenna with a new one. ※ The broadcasting signal is too weak. ※ The antenna is poorly grounded. Check and at its mounting location.
Poor effect on electronics anti-shaking	※ The unit' deck is dusty. Please clear it.
The disc cannot be loaded	※ A disc is already loaded
The stereo indicator  is flashing	※ Tune in the frequency accurately. ※ The broadcasting signal is too weak. (Set to MONO mode)
No picture	※ The video line from main unit to the TV is not connected properly
The picture noise appears	※ Improper setting of the color system. Set the color system to "PAL" or "NTSC" . According to the connected television. ※ The CD is dirty or damaged.